

Advantages of tiled kitchen work surfaces ... at a glance

Individual advantages



- High quality design
- Large selection of Schlüter®-PROFILES
- Endless combination of colours, finishes and tile formats
- Integration of wall areas and work surfaces into the design

Material advantages

- Resistant to heat, cutting and impact
- Hygienic
- Moisture proof

Construction advantages

- Renovation projects do not require the removal of the existing kitchen cabinets
- Easy installation

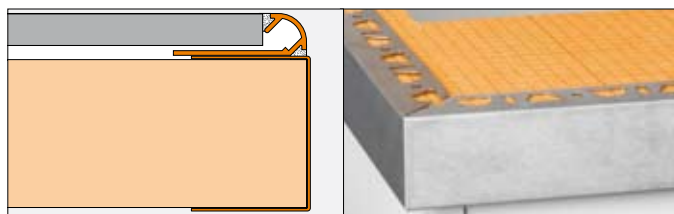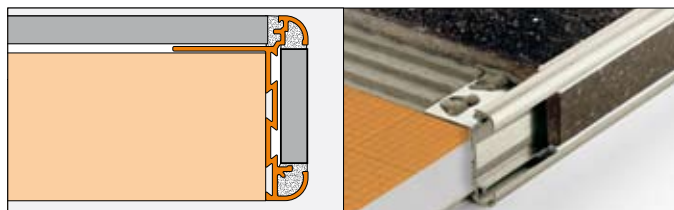

Installation procedures

... 1 to 4



- 1 Apply the installation adhesive Schlüter®-KERDI-FIX to the attachment areas of the work surface.



- 2 Set Schlüter®-KERDI-BOARD in place. The removed work surface (if available) can serve as a template to determine the location of the sink and hob. These can simply be cut out with a utility knife.



- 3 If the splash back is to be tiled, attach Schlüter®-KERDI-BOARD as a substrate panel of thickness 9 mm or 12.5 mm using tile adhesive.



- 4 Apply Schlüter®-KERDI-FIX to the custom cut edge profiles and set them in place. As an additional option, adhere the symmetrically rounded profile Schlüter®-RONDEC.

Installation procedures

... 5 to 8



- 5 Apply tile adhesive on the Schlüter®-KERDI-BOARD panel, using an appropriately sized notched trowel.



- 6 Cove shaped profiles are incorporated between the work surface and wall.



- 7 Install the tiles, embedding them fully in the tile adhesive.




- 8 Apply tile adhesive on the wall area, using an appropriately sized notched trowel. Install the tiles, embedding them fully in the adhesive.

Installation procedures

... 9 & 10



- 9 As an option, integrate the additional border profiles Schlüter®-DESIGNLINE for visual appeal.

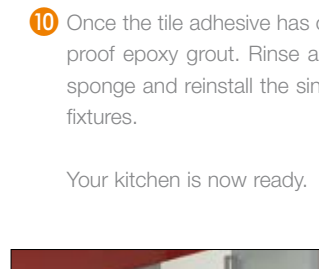

- 10 Once the tile adhesive has cured, the joints are grouted with waterproof epoxy grout. Rinse and clean the surface of the tiles with a sponge and reinstall the sink and hob, followed by the appropriate fixtures.

Your kitchen is now ready.






Schlüter®-KERDI-BOARD



Schlüter®-QUADEC



Schlüter®-RONDEC

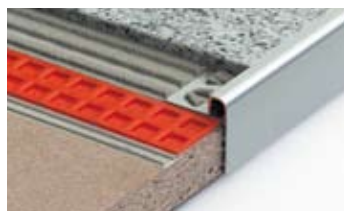

Schlüter®-RONDEC-STEP



Schlüter®-RONDEC-STEP-CT



Schlüter®-DILEX-AHK



Schlüter®-DILEX-HKS



Schlüter®-DILEX-HKW

Information

Find out more



Kitchen work surfaces brochure (A4)

Please request our free illustrated brochure for further details on the advantages and beauty of a "creative kitchen design with ceramic tile."

Tel: 00 44 (0) 1530 813396

E-mail: sales@schluter.co.uk

Material checklist

You will need the following materials for installing tiled work surfaces and splash backs:

- ☐ **Substrate**
Structural panel as kitchen work surface base
Schlüter®-KERDI-BOARD (50 mm or 38 mm)
Bonded waterproofing panel for splash back
Schlüter®-KERDI-BOARD (9 mm or 12.5 mm)
- ☐ **Edge profiles**
Schlüter®-KERDI-BOARD-ZC
... for Schlüter®-KERDI-BOARD, 38 or 50 mm
Schlüter®-RONDEC, Schlüter®-QUADEC,
Schlüter®-RONDEC-STEP-CT or
Schlüter®-RONDEC-STEP
... for Schlüter®-KERDI-BOARD, 38 mm
- ☐ **Cove shaped profiles**
Schlüter®-DILEX-AHK, Schlüter®-DILEX-HKS
or Schlüter®-DILEX-HKW
- ☐ **Connectors and end caps**
Inside and outside corners
- ☐ **Tiles**
- ☐ **Grout**
- ☐ **Thin set mortar (tile adhesive)**
- ☐ **For wall tiles:**
Border profile Schlüter®-DESIGNLINE (optional)



KITCHEN DESIGN WITH CERAMIC TILE
AND NATURAL STONE
INSTALLATION PROCEDURES



INNOVATIVE PROFILES