


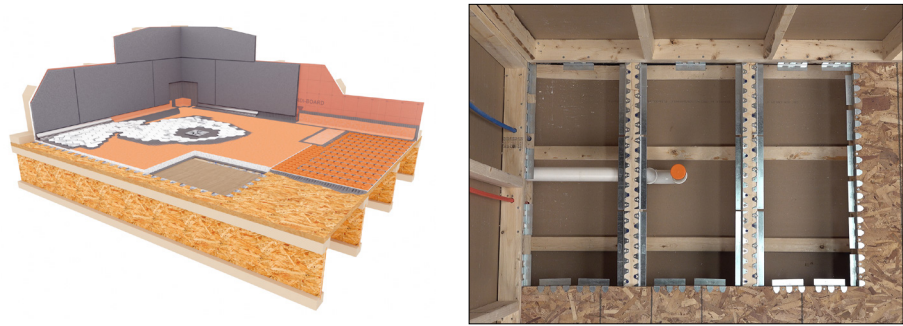


Product Table:



Subfloor Recessing Kits for Curbless Showers

Schluter®-KERDI-SHOWER-FRS		Subfloor recessing kit for curbless showers				
Item No.	Area	Quantity				
		J brackets	P brackets	Self-tapping screws		Wood screws
				2-3/4"	1-5/8"	1-1/8"
KS FRS K12	12 ft²	14	21	50	105	40
KS FRS K16	16 ft²	18	27	50	105	40

Contents

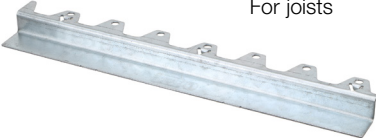

J brackets
For joists



P brackets
For perimeter



Self-tapping screws
2-3/4"
(70 mm)



Self-tapping screws
1-5/8"
(41 mm)



Wood screws
1-1/8"
(29 mm)

Bracket Kits

Schluter®-KERDI-SHOWER-FRS

J Brackets - for Joists

Item No.	Contents
KS FRS KJ2	2x J brackets For joists 15x Self-tapping screws 1-5/8" (41 mm) 5x Wood screws 1-1/8" (29 mm)

Schluter®-KERDI-SHOWER-FRS

P Brackets - for Perimeter

Item No.	Contents
KS FRS KP4	4x P brackets For perimeter 10x Self-tapping screws 2-3/4" (70 mm) 15x Self-tapping screws 1-5/8" (41 mm)

Shims

Schluter®-KERDI-SHOWER-FRS

Shims

Item No.	Qty / Package	Contents
KS FRS SH60	60	60x Shims